

Twin Shower With Air Shower Il

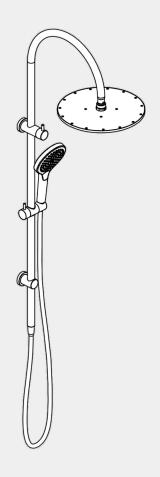

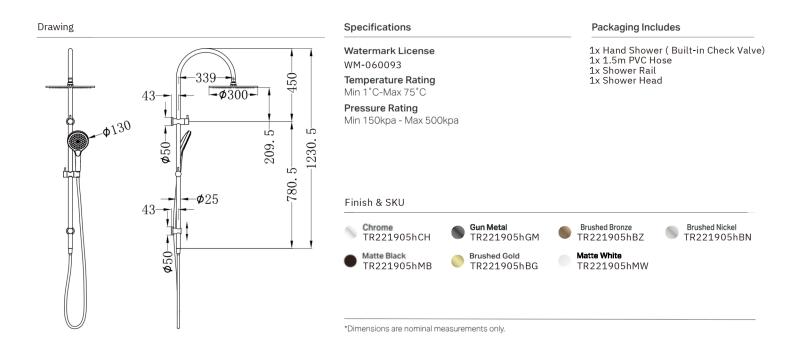

Versions:202401



Important

All products must be installed by licensed plumbers.

All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.




1.Drill a φ6mm hole at the downwards outlet vertical downward position in the recomendation range.







2. Screw the adapter onto the outlet. Push wall plug into drilled hole. Fit lower mounting pillar in place with screw. Tighten firmly.

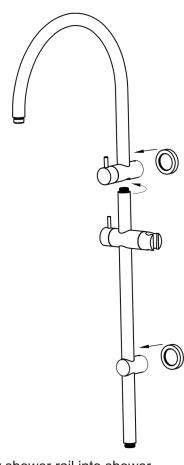


3. Screw shower rail into shower arm component. Tighten firmly. Push 2 back plates onto shower arm component and lower mounting pillar.

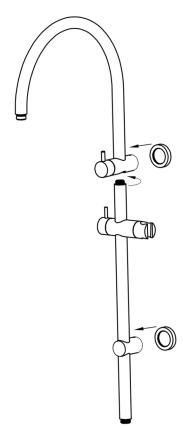

4. Locate and push shower rail assembly onto wall adaptors. Tighten grub screws firmly with allen key provided.
Slide the back plates against the wall/tile face properly.

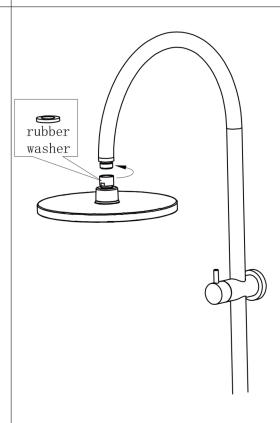

5. Screw shower head to shower arm with care. (Note the rubber washer in the shower head.)

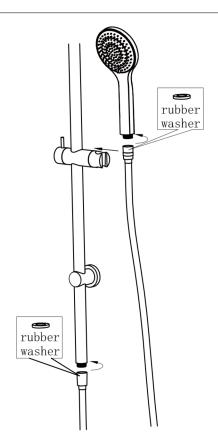

6. Please noted the rubber washer in the hand shower.

Connect shower rail and hand shower with hose. TEST & CHECK FOR LEAKS.